# **Squirt-R**

#### **Features**

- Linear or Square Root Extraction of Input
- 3 1/2 or 4 1/2 Digit Display (Selectable)
- Calibration, High and Low Values Fully Programmable Through Keypad
- NEMA 4X / IP65 Front
- · No Dipswitches or Pots to Adjust
- 16 Bit A/D Resolution
- Password Protection of Menu

# **Loop Powered Indicator**



#### **Description:**

Featuring up to 4 1/2 digits of display, the Squirt-R is a loop powered indicator capable of accepting either linear or square root 4-20 mA inputs. Numeric password protection prevents unauthorized access to the menu. The easy-to-read menu prompts make the Squirt-R so easy to program that you will feel comfortable programming it without the use of a manual.

#### **Specifications:**

#### Power:

Loop powered 4-20 mA

Internal Battery (Setup memory storage only):

3 V 250 mA-H Lithium (2 yr. Standby life)

#### Display:

Display: (selectable decimal)

3.5 or 4.5 Digits (selectable), 0.35" High, Display up-

dates once every two seconds.

Rate Descriptors: /SEC, /MIN, /HR or "blank" Units Descriptors: GAL, LIT, FT3, M3, "blank"

Low Battery Error Detection: "BAT" descriptor & flashing

display

Under/Over range Indication: Display flashes when out of

range

#### **Environmental:**

**OPERATING TEMPERATURE** 

 $-4^{\circ}F$  (-20°C) to + 158°F (70°C)

Extended Temp: -22°F (-30°C) to + 158°F (70°C)

**HUMIDITY** 

0 - 90% Noncondensing **Listing:** CE Compliant **Accuracy:** (Indication @ 20°C) 0.1% Full Scale Resolution

Temperature Drift: 50 ppm/°C Typical 200 ppm/°C Worst Case

#### Lockout:

Password: Unauthorized menu changes can be prevented by entering a user selectable password (5 digit number).

Jumper: An internal jumper shunt is provided for a "sealed" menu lockout. Install the jumper to enable the lock.

### Inputs:

Signal Input:

Full Scale Range: 4 to 20 mA DC Loop Voltage Drop: 6 Volts Maximum

Reverse Polarity Protected Over Current Protection to 60 mA

16 Bit resolution; 1 sample every 2 seconds

Low Cutoff supplied to inhibit indications at low flow rates.

Calibration & Operation:

Input Scaling: Via front keypad Calibration: Via front keypad Decimal Point: Via front keypad Keypad: 4 tactile feedback keys

**Mounting Styles:** 

0- Circuit Board - OEM option (consult factory)1- Panel Mount - NEMA 4X Clear Front

2- Wall Mount - NEMA 4X Enclosure (unit mounted


behind clear cover)


**3-** Explosion Proof - Class I, Division I, Groups B, C & D

Class II, Division I, Groups E, F & G

5- Wall Mount - NEMA 4X with keypad mounted outside opaque cover




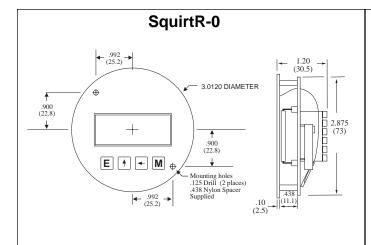

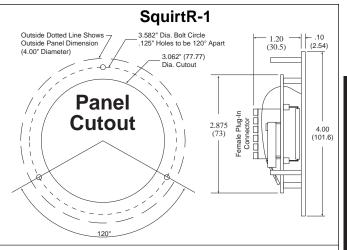


# SquirtR-2

#8 Screw Mounting holes molded directly under cover screws. Max. screw head .29" (Typ. 4 places)

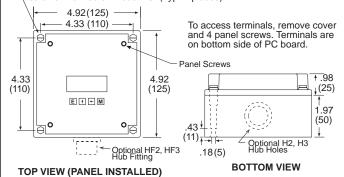


## SquirtR-3

To access terminals, unscrew cover and loosen 2 panel screws. Terminals are on bottom side of PC board.

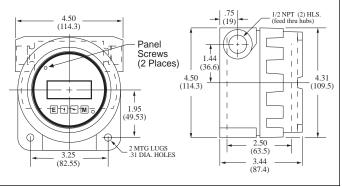



## SquirtR-5

#8 Screw Mounting holes molded directly under cover screws. Max. screw head .29" (Typ. 4 places)

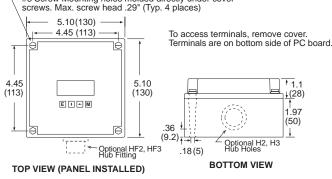

# **Typical Wiring:** (2-Wire Transmitter)

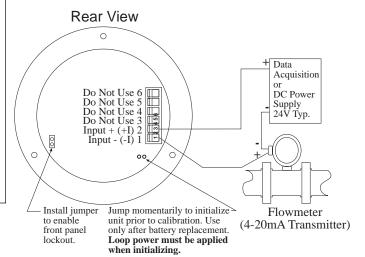

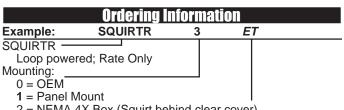

2 = NEMA 4X Box (Squirt behind clear cover)

3 = Explosion Proof Housing

5 = NEMA 4X Box (Squirt outside opaque cover) Options:

ET = Extended Temp.: -22°F to 158°F (-30°C to 70°C)

H2 = 0.875" Hole for mounting styles 2 and 5

HF2 = 0.5" Female NPT Hub fitting for mounting styles 2 and 5

H3 = 1.125" Hole for mounting styles 2 and 5

HF3 = 0.75" Female NPT Hub fitting for mounting styles 2 and 5